



# Snocone Machine



## THE MACHINE

The machine includes a 110 volt, single phase, 60 cycle, AC current motor with a toggle switch, shaving unit, dispensing case, and separate light switch inside the case. A cutter head is on the end of the motor shaft inside the shaver body (gooseneck). The pusher handle presses the ice against the revolving cutter head to produce the shaved ice.

**NOTE:** The machine must be properly grounded to prevent shock.

## TIPS

1. Start the motor and fill the gooseneck an inch from the top with ice cubes or 3" x 4" pieces of ice. (The larger the pieces the better the snow).
2. Push ice down against the cutter head with firm pressure for best snow. (too much=coarse ice; too little=mushy).
3. DO NOT force the handle.
4. A surface temperature of 150 degrees is normal.
5. Put only ice in the gooseneck to prevent damage to the blades.
6. Keep fingers away from the shaver body when the motor is running to prevent injury.

## CLEANING INSTRUCTIONS

1. No need to clean.

For questions or additional help you can call us during store hours at **231-737-7368** or after hours at **231-672-0641**  
Check out other items to rent at **RediRental.com**